

Sensory articles

Sensory articles are used to confirm body awareness and existence of the individual in persons with dementia by giving them as many sensory stimuli as possible.



** Colours and designs may differ (Boomerang cushion XS not included, sold separately **40640**)*

Md 31832^{TS}

Sensory cover for boomerang cushion XS, in qual. 1060, washable, with belt, sewn in bells and buttons, a ring to attach something personal, Close-up® zipper (can be combined with **40640** boomerang cushion XS).

Purpose:

- Tactile stimulation.

Guideline for use:

Place the boomerang cushion with the sensory cover on the thighs and tie the belt with a simple knot on the user's back.

Quality: 1060, permanently flame retardant, breathable material, high tear resistance.

Washing instructions for the sensory articles :

1. *Washing* Wash at 60°C.
2. *Dry* Dry very briefly at low temperature in the dryer or hang to dry.

